

Changing Display From °C To °F DES2000 controller.

The control can be configured for either °C or °F. Use the following steps to change control from displaying °C to °F.

- 1. Press and hold the for three (3) seconds.
- 2. The display will read **CtL**. The SP LED will flash indicating that Operating Parameter mode has been entered.
- 3. Press the until **LoC** appears on the display.
- 4. Press the ▲ or ▼once to enter the parameter.
- 5. Press the ▼ to set the value to **0**.
- 5.A. Repeat step 5 and set the value to -1. The SP LED will flash rapidly, indicating that the Set-Up Parameter mode has been entered.
- 6. Press the to enter the value. The display will read **In**.
- 7. Press the ▲or ▼ once to enter the parameter.
- 8. Press the ▲ to set the value to **35**. The right decimal point LED will flash indicating that the setting is being changed. This will stop flashing when the new value has been entered.
- 9. Press the to enter the value.
- 10. Press the until **SPH** is displayed.
- 11. Press the ▲ to set the value to 400.
- 12. Enter a value of **400**.
- 13. Press the to enter the value.
- 14. Repeat steps 12 –14 for **SPL**; the value is **32**.
- 15. Press and hold the for three (3) seconds to return to the operation mode.

WARNING: Make sure

you understand what you are changing before doing so.

Changing the program parameters will alter the

functions of the CONTROL.

INSPIRED INNOVATION



NOTE: To change from

°F to °C repeat the
above steps. The
following are the values
to be entered:
In = 5
SPH = 204
SPL = 0
P = 5
9
16. Press and hold the for three (3) seconds.
17. The display will read CtL. The SP LED will flash indicating that Operating
Parameter mode has been entered.

- 18. Press the until P appears on the display.
- 19. Press the \square or \square once to enter the parameter.
- 20. Press the \square to set the value to 5. The SP LED will flash indicating that the setting is being changed.
- 21. Press the to enter the value.
- 22. Press and hold the for three (3) seconds to return to the operation mode.
- 23. The control now reads °F. Enter the desired setpoint.