


AB inverter setting instruction

1. Please press the key  twice, then you can see the screen will be shown "d001", make sure the letter "d" flash.

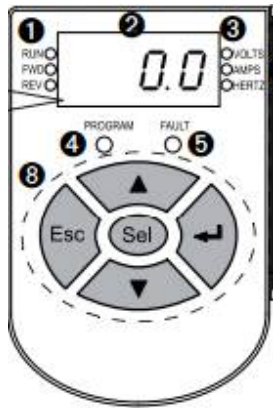

2. Press the  a couple times until you can see the "A00X".
3. Press the , you can see the rightmost digit "X" will flash, then press the key  until "A452".
4. Press the , you can see the value of a parameter "A452",
5. Press the , you can see the digit will flash, press  change the value from "5" to "0".
6. Press the , to save the change.
7. Press  to return to the parameter list.